



### JUMPER SETTINGS

J1	1-2 PULL-DOWN (default) 2-3 PULL UP
J2	1-2 OUT (default) 2-3 IN
J3	1-2 PULL-DOWN (default) 2-3 PULL UP
J4	1-2 COM=GND (default) 2-3 COM=5V