


**Low Voltage Motor Connections**


**AC Voltage Input**

**E-Stop or Jumper**

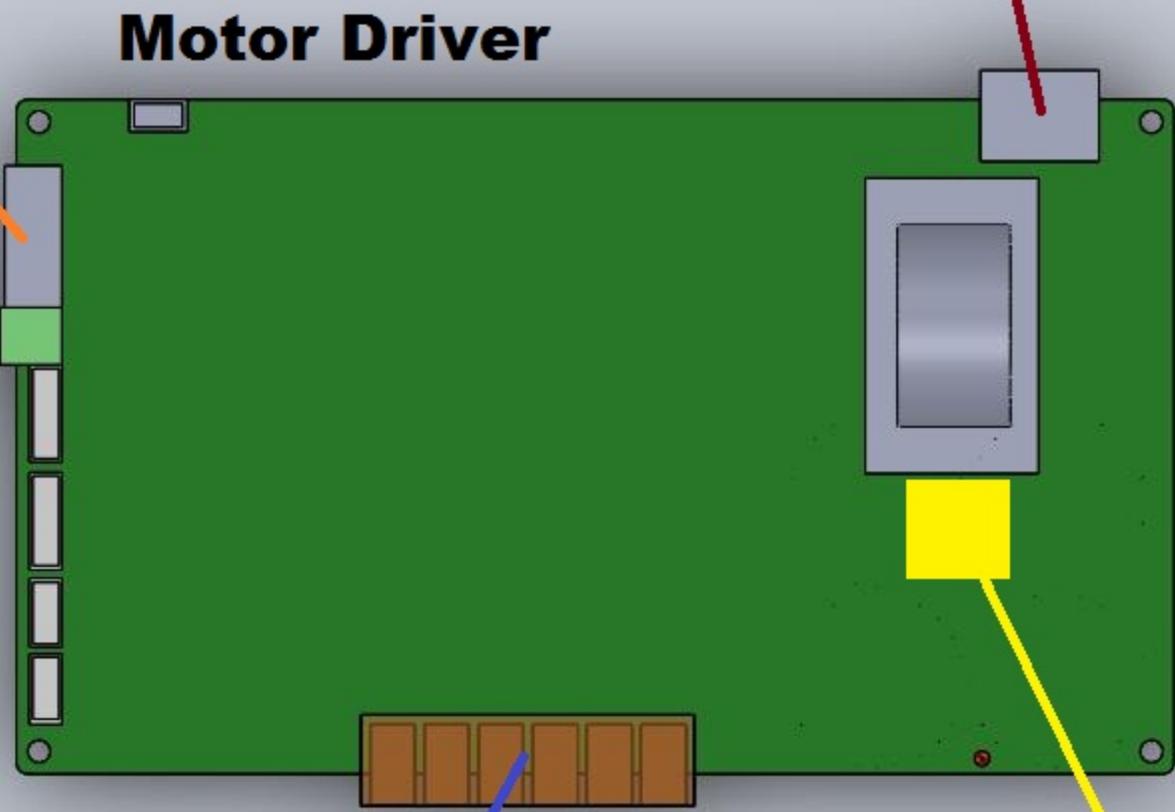


**High Voltage Motor Connections**

**LCD**

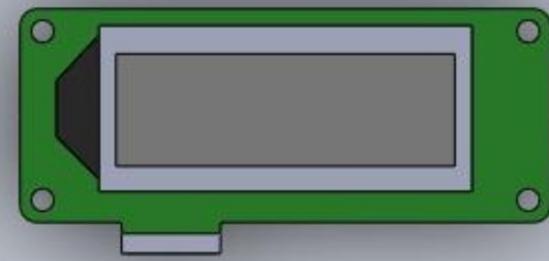

**Control Panel**

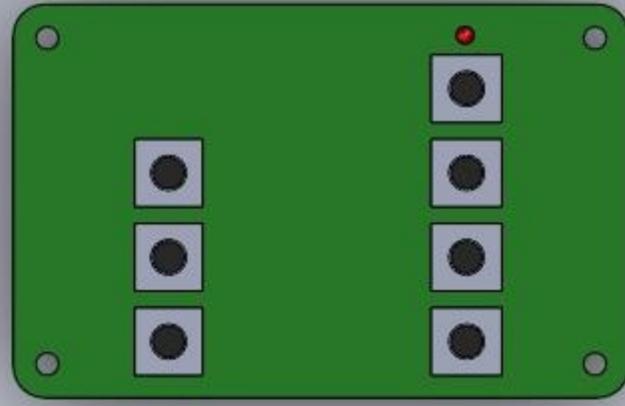


**Jumper for Input Voltage Selection**

## Input Voltage Selection:


-110V Input: Add jumper between J1 and J2 as shown

-220V Input: No Jumper between J1 and J2



\*\*\*\*Note jumper is not installed during shipment

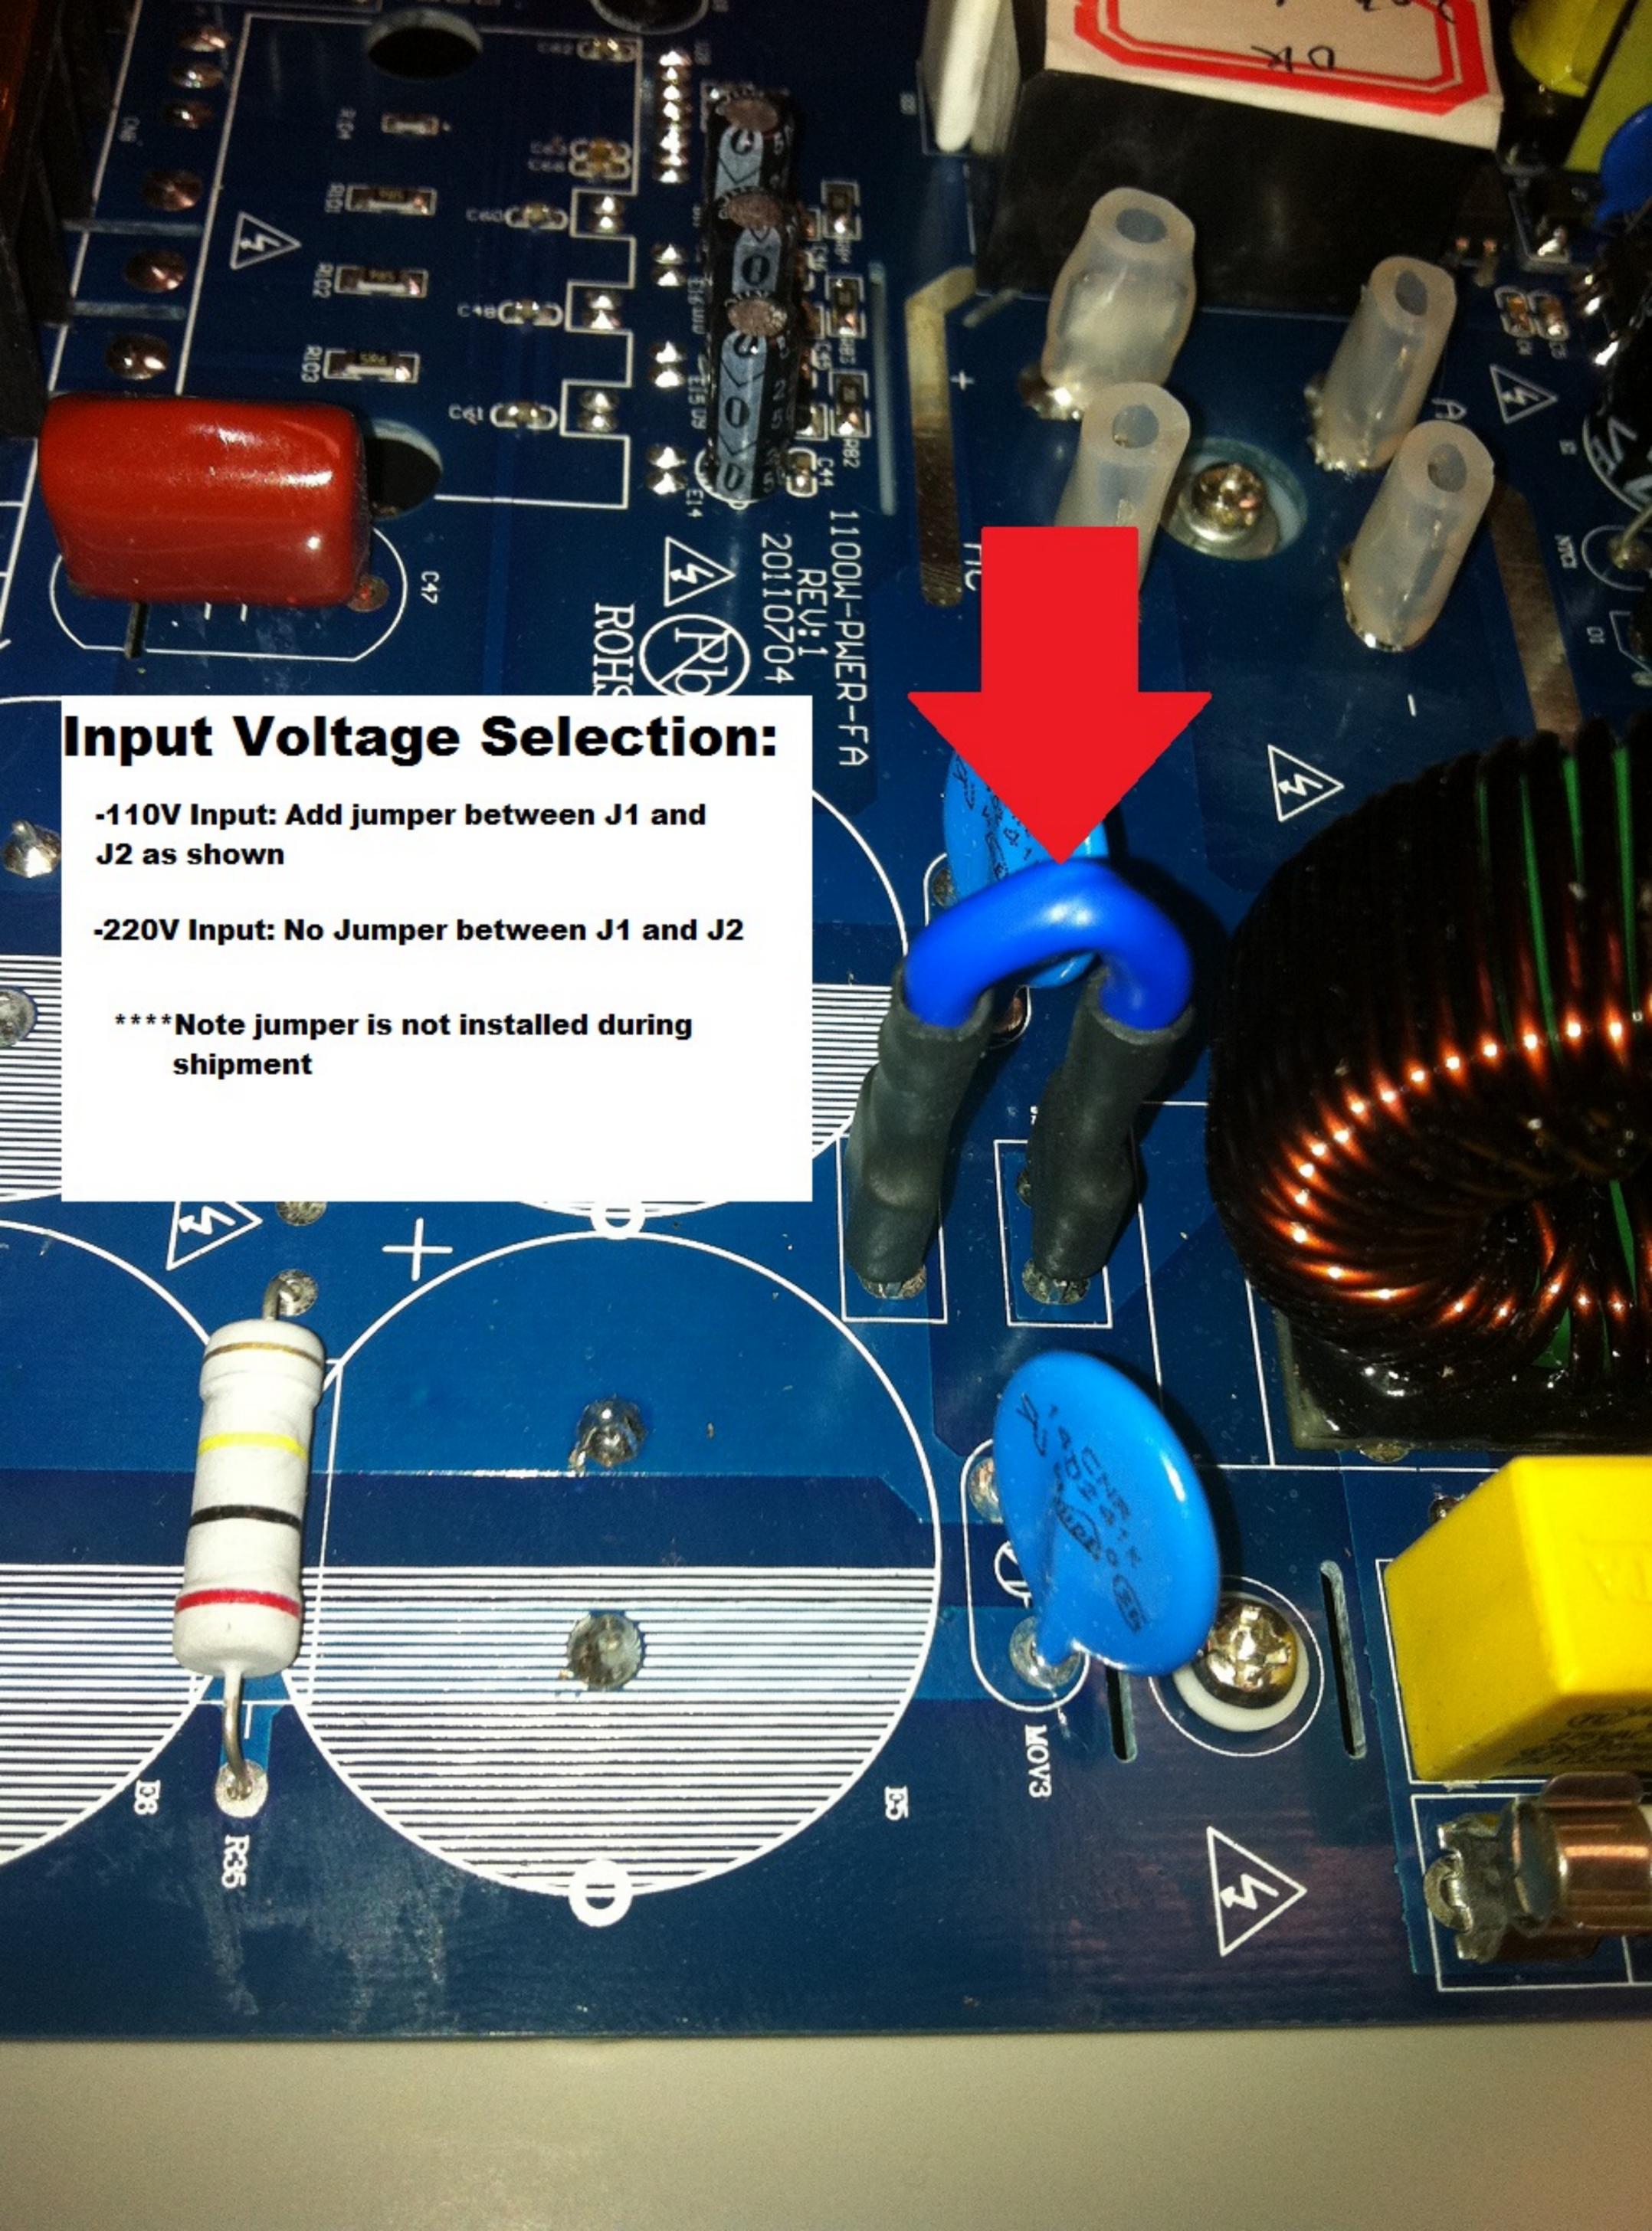


# Input Connection

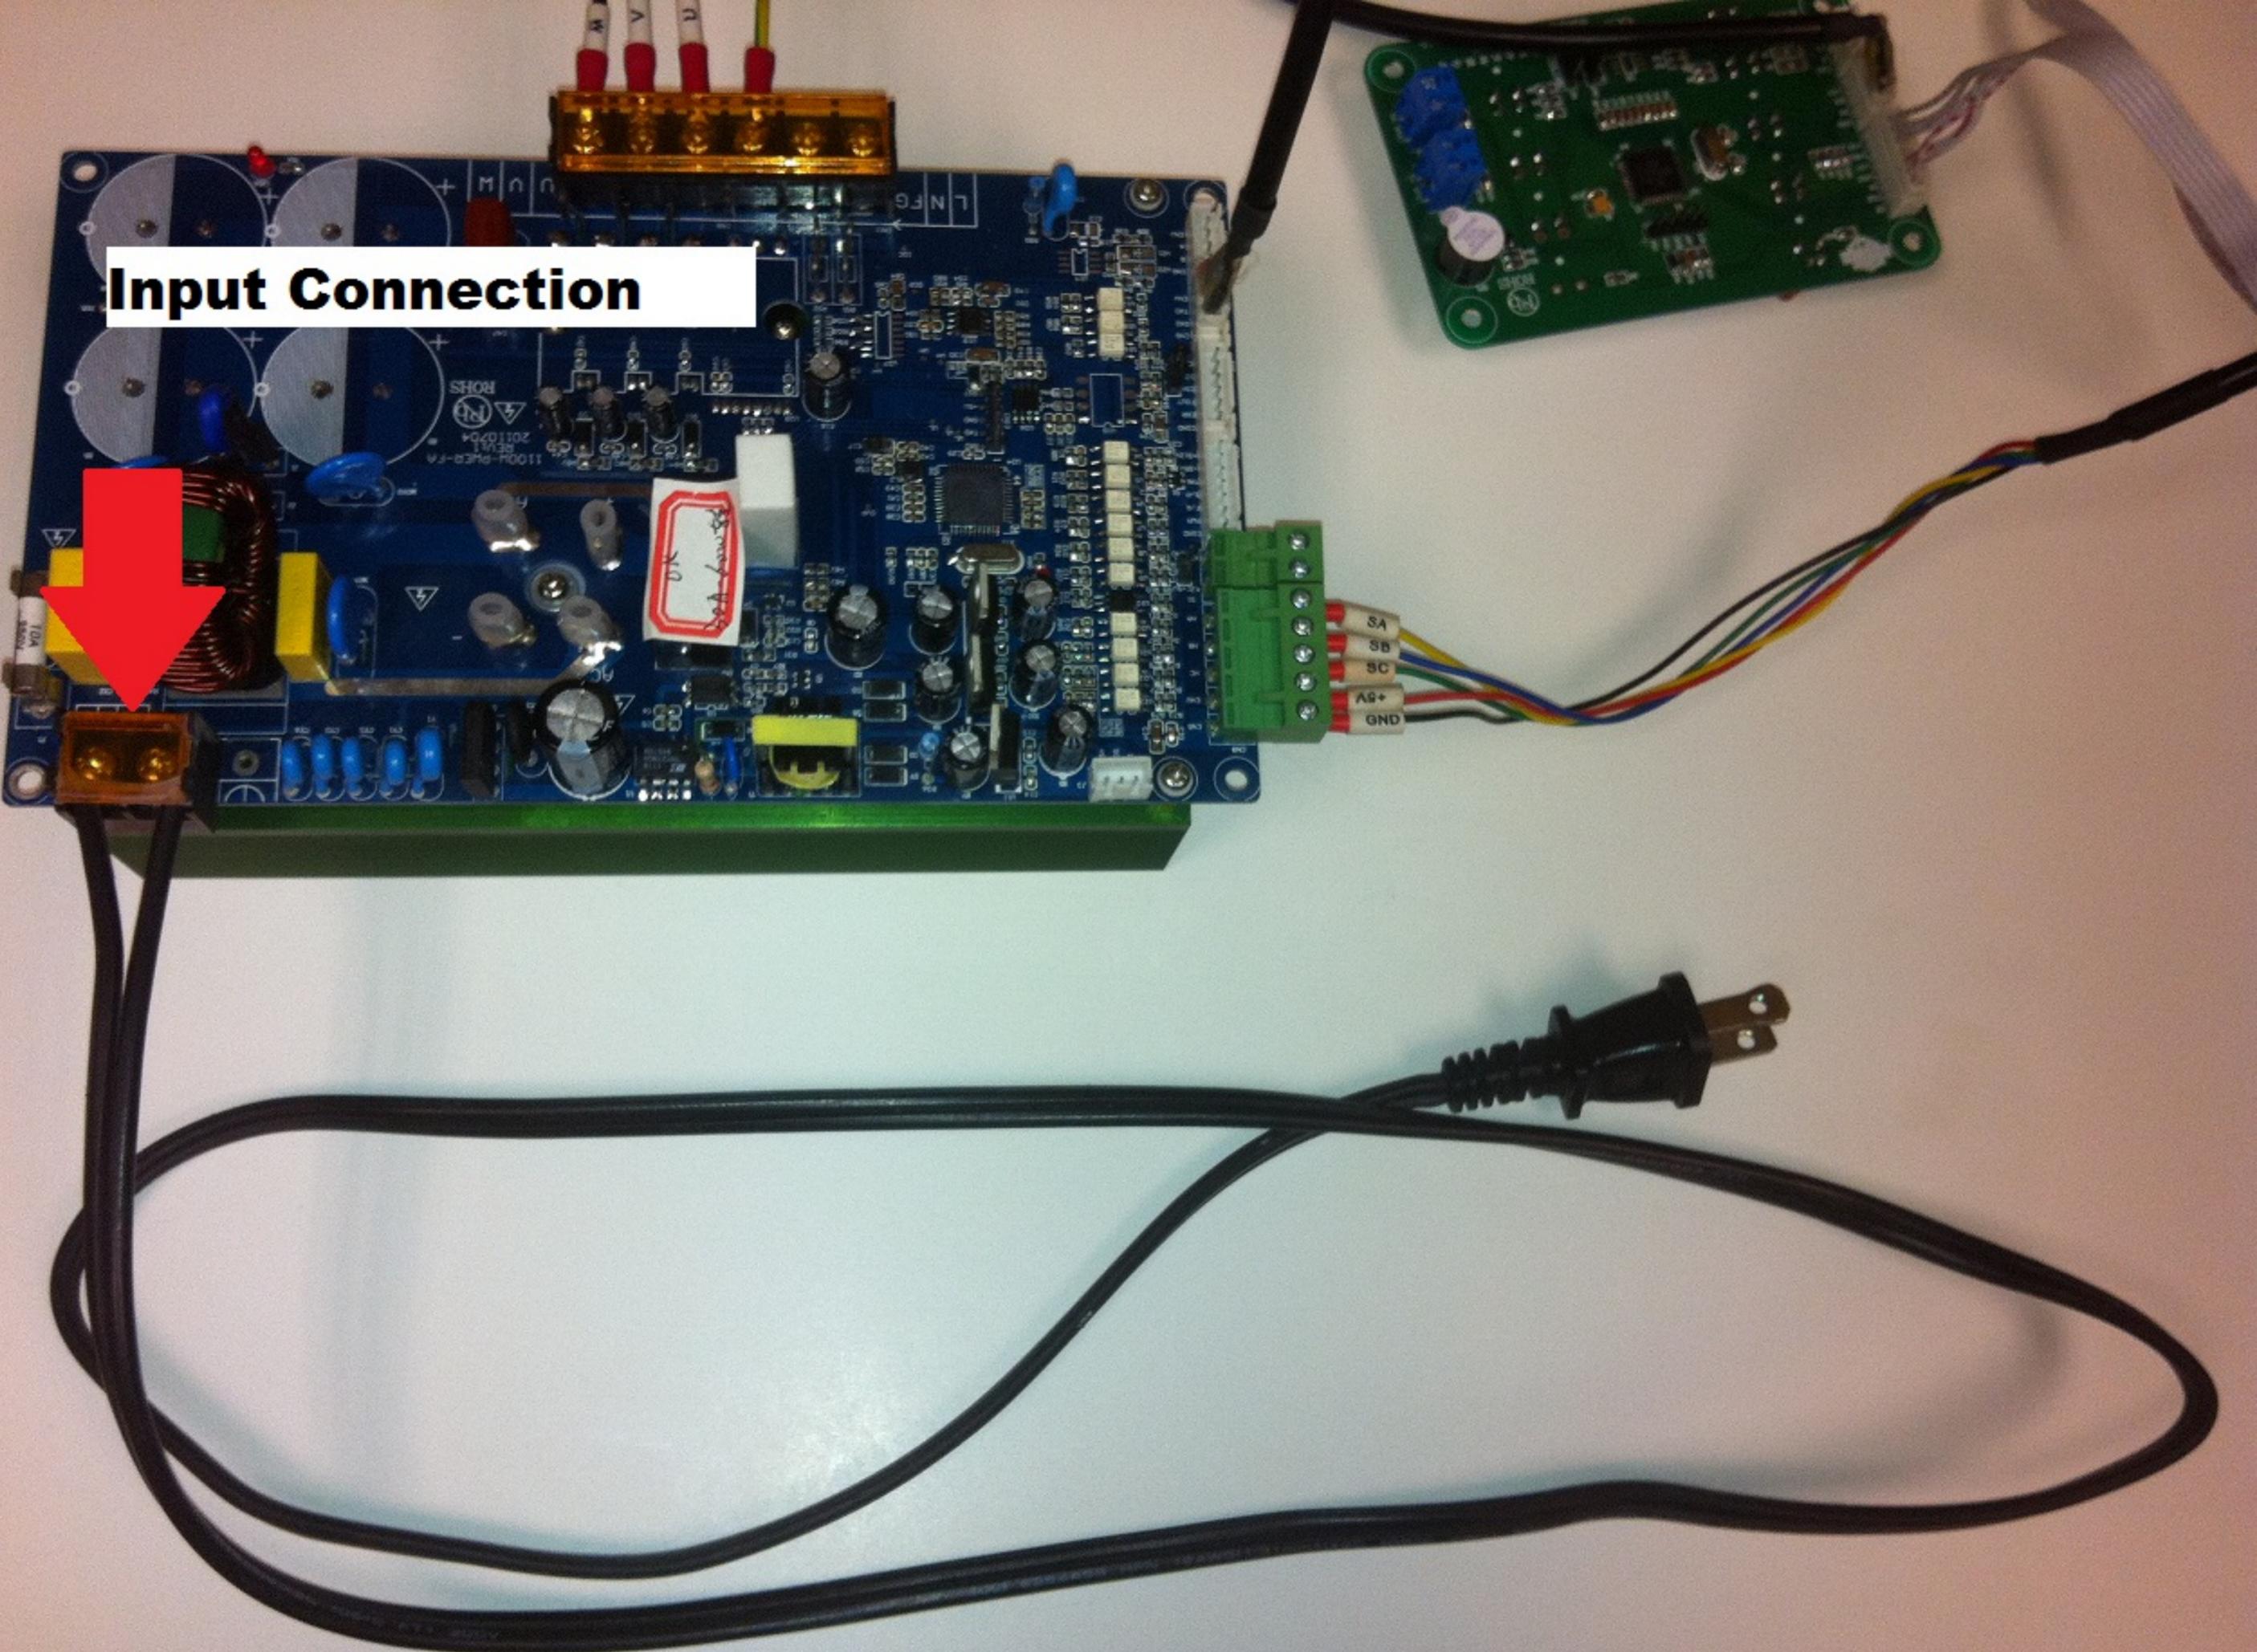


# Connections Between Control panel and LCD

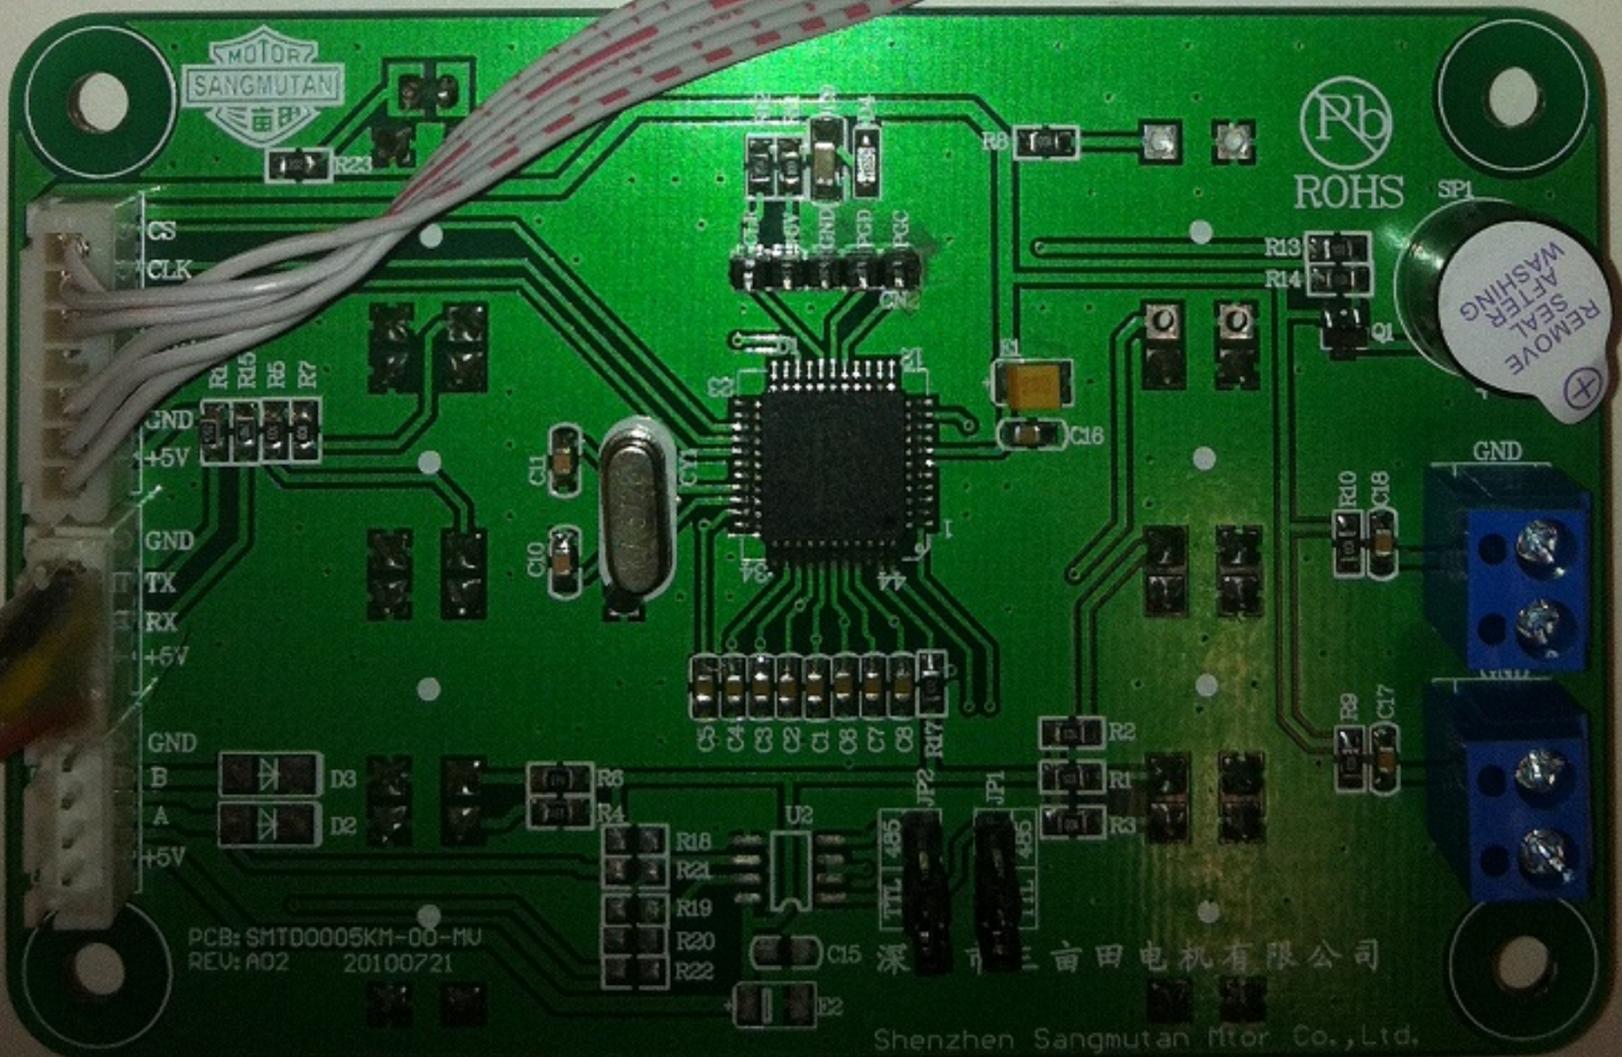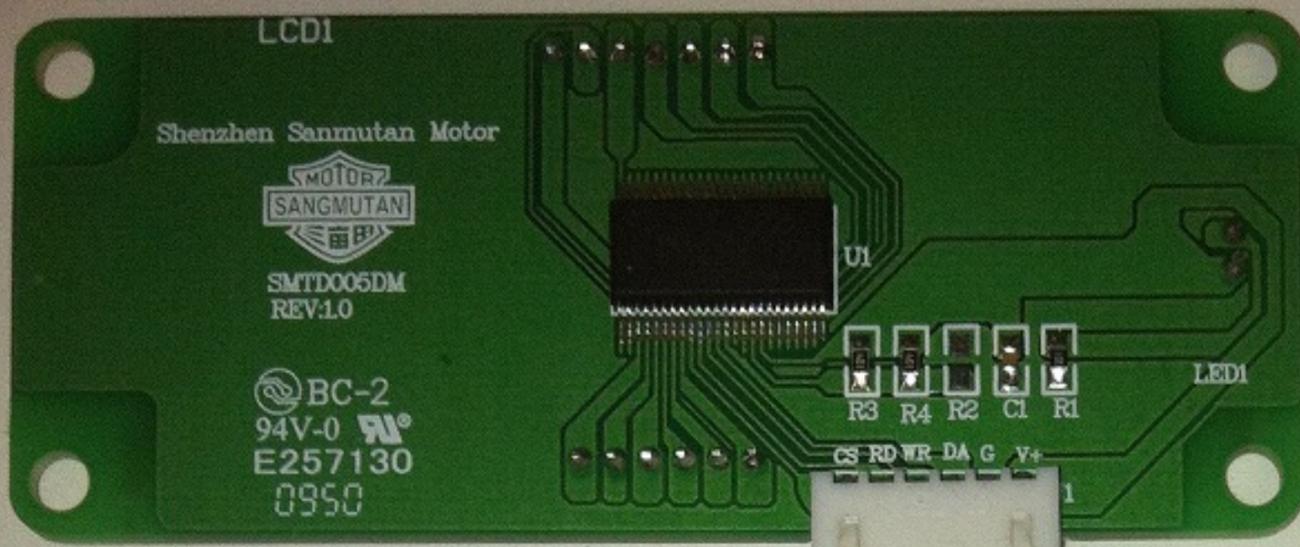

**Connections between the control/display and the driver**

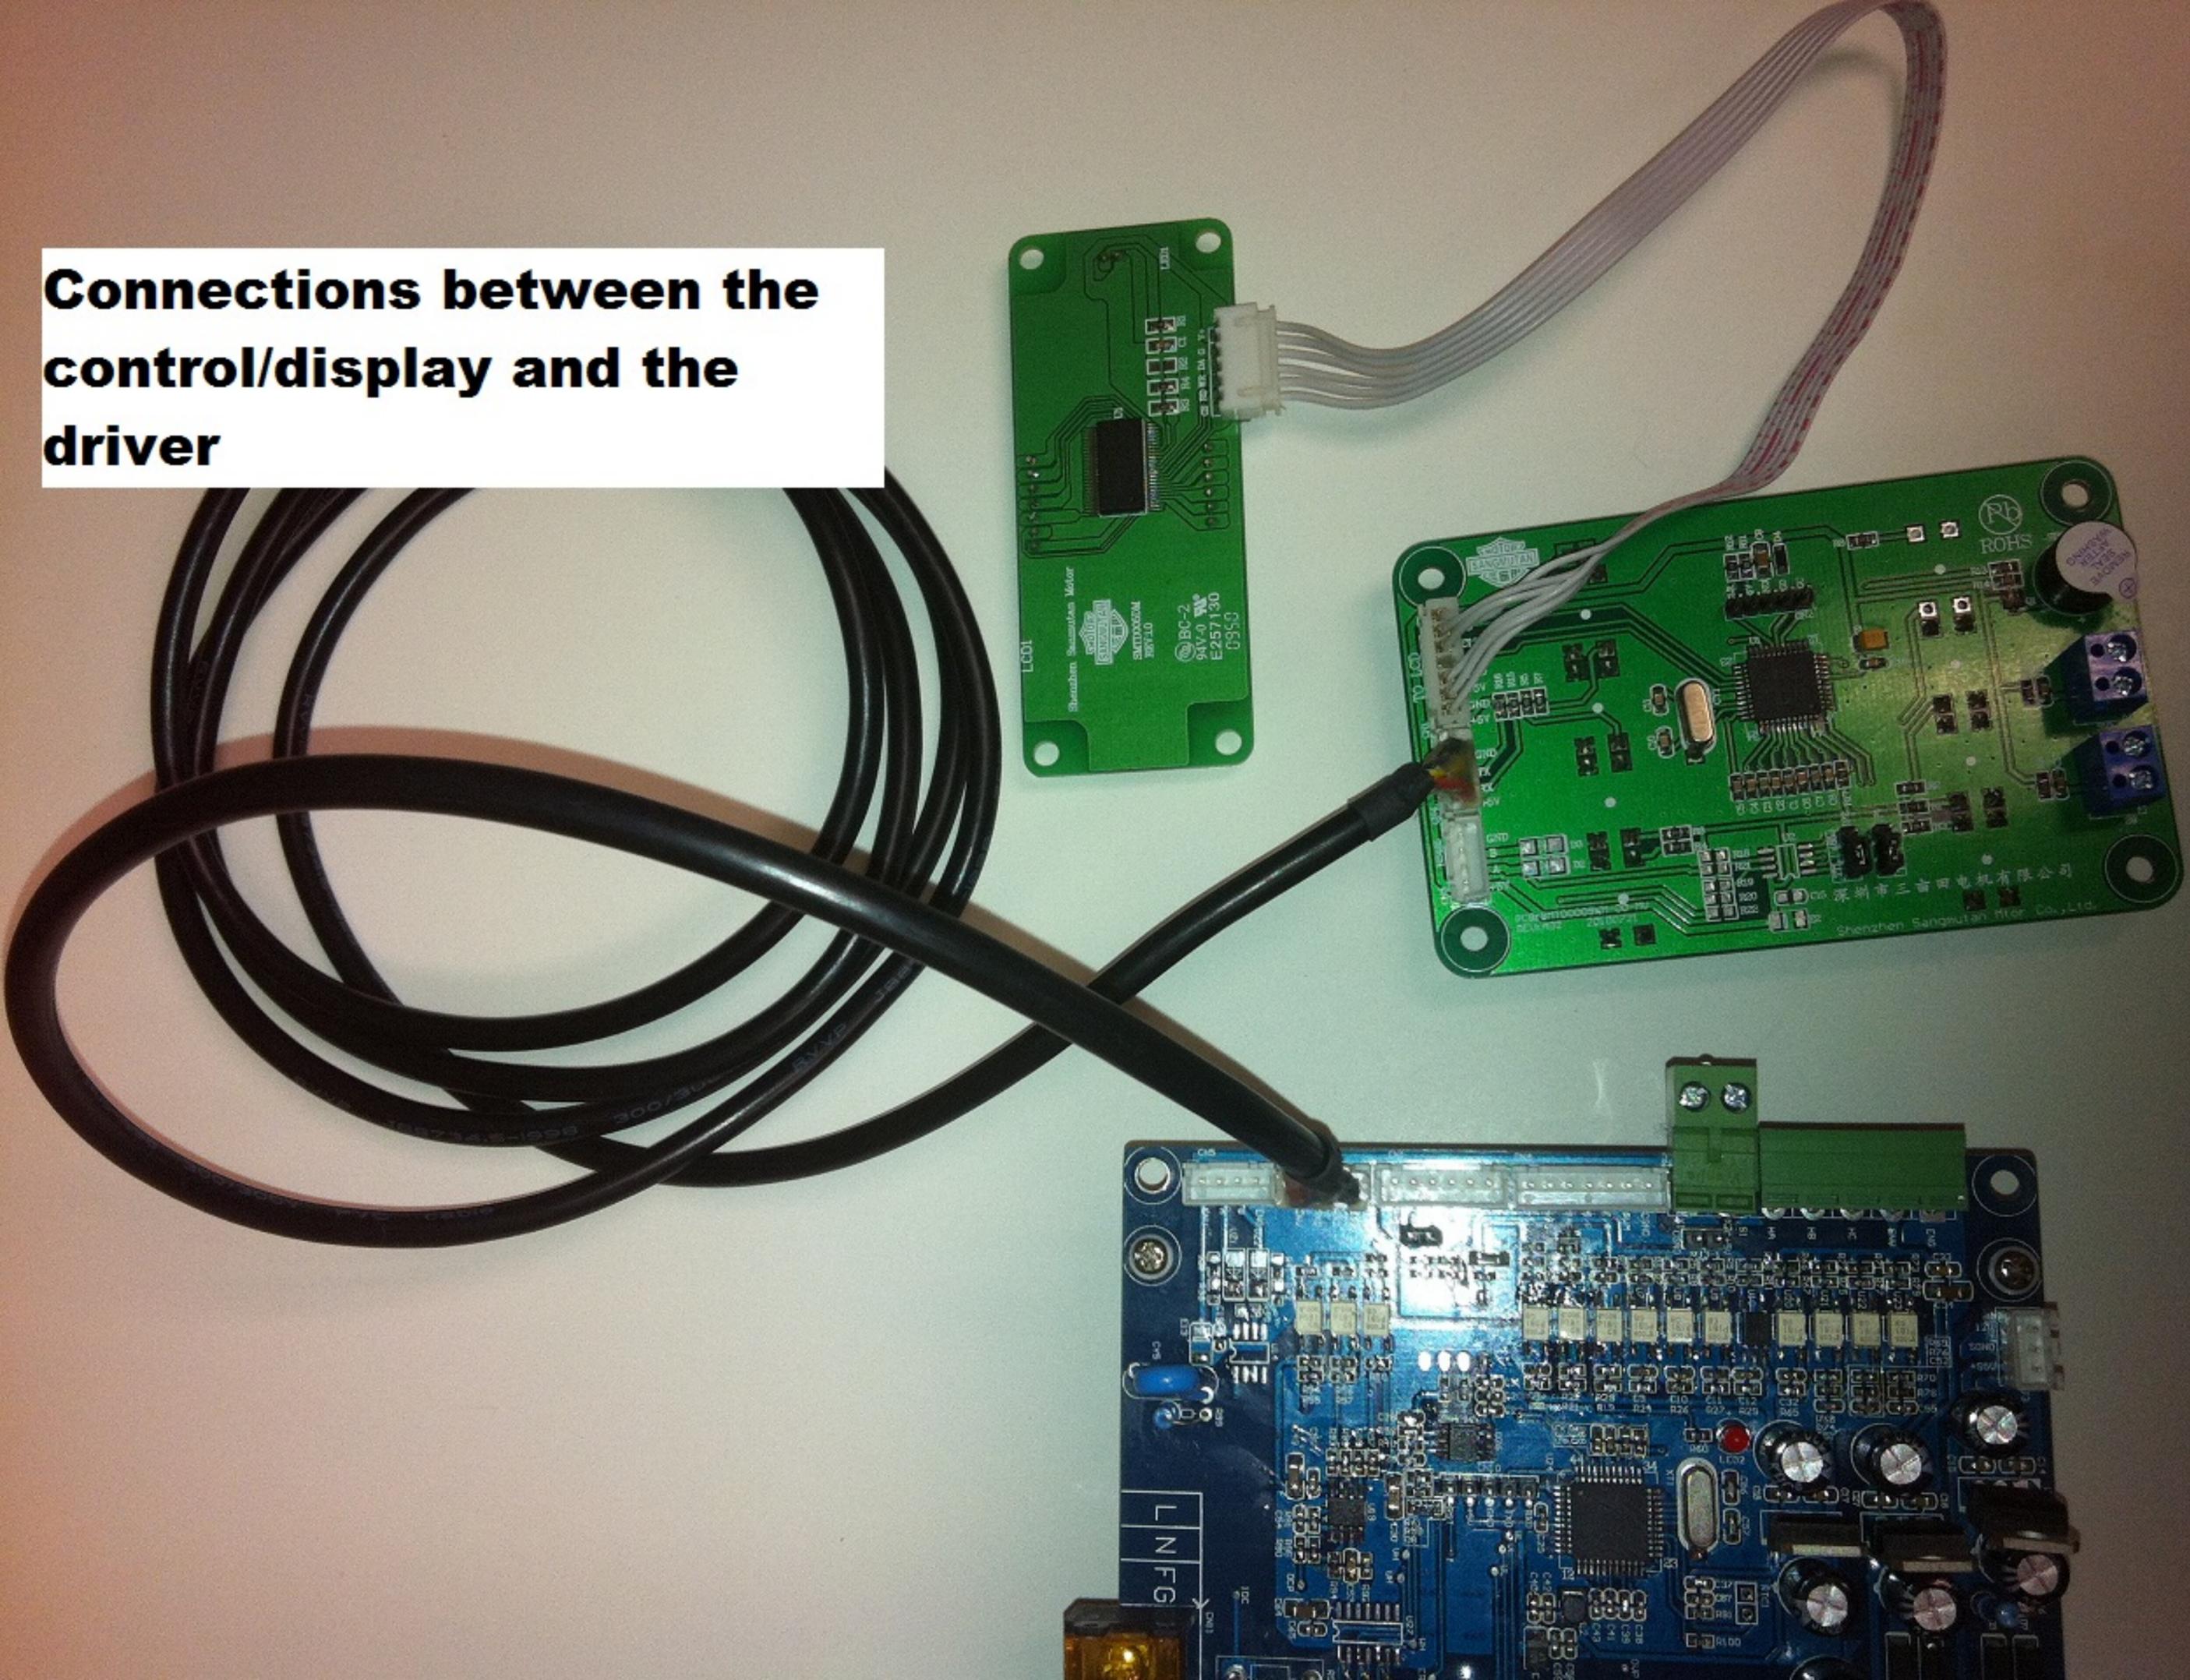

# High Voltage Motor Connections

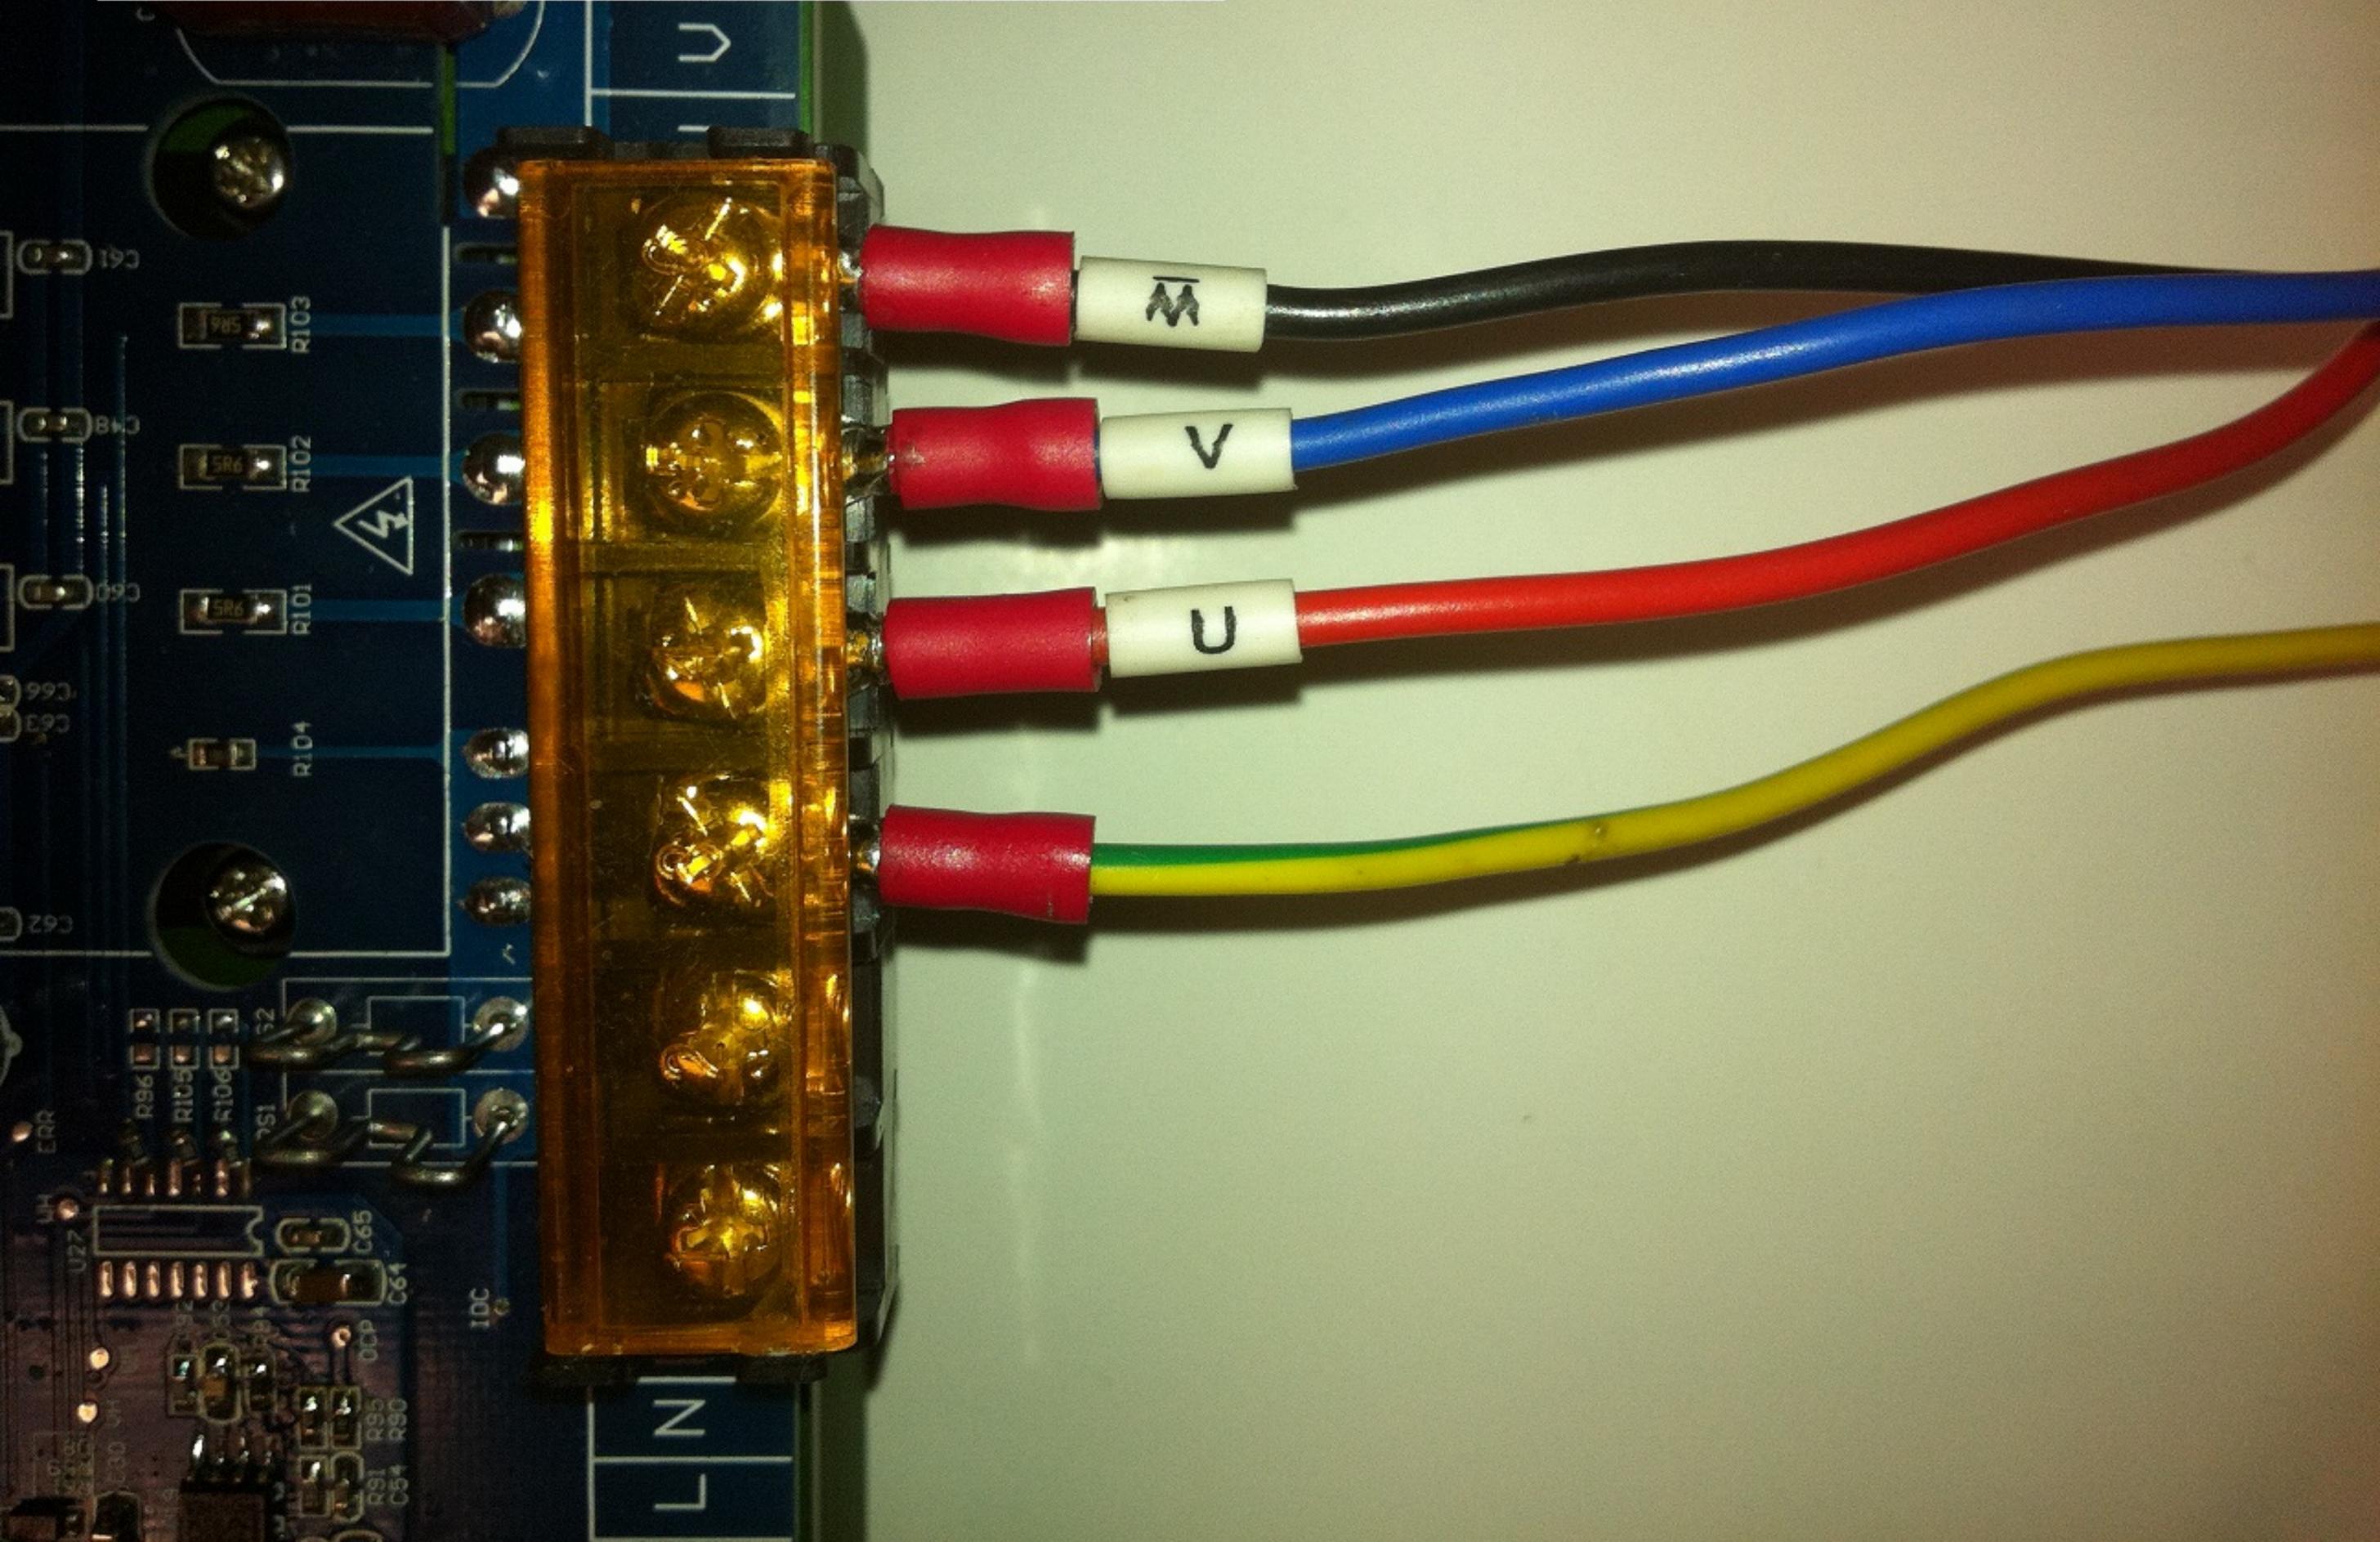

# Low voltage/Signal Connections for the Motor

